




# Driver Information Display Faint Blinking With Key Off

# UPDATE

**Models Affected: Certain 2011 or Later Model Year Vision Buses**

**WARNING:** Always follow all Federal, State, Local and Shop safety standards and use proper safety equipment when performing these procedures.

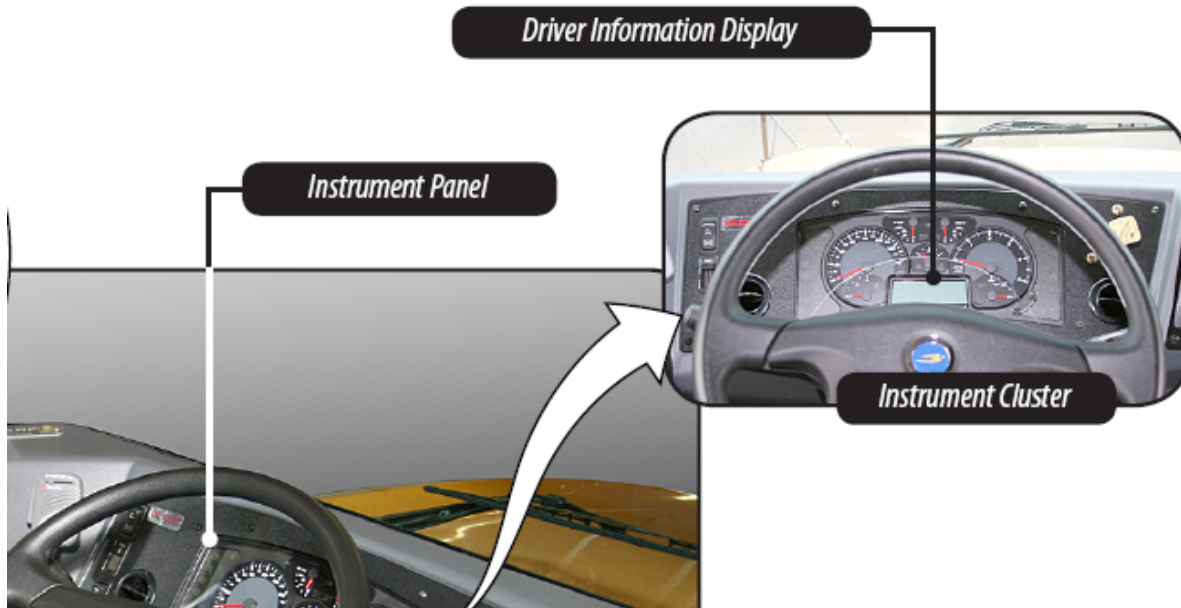

### Symptom:

With the ignition key off the driver information display is off, but a faint light pulses twice every 4-5 seconds continuously like the display is trying to power up. The rest of the instrument panel is inactive or off.

### Cause:

Instrument cluster configuration setting for battery controlled lift is “ENABLED” and the bus does NOT have battery controlled lift feature 31045-02.

### Corrective Action:

Follow “Configuration Menu” instructions below and change the “BATTERY CONTROLLED LIFT” configuration setting to “DISABLED”.

S U I 2 I 8

S E R V I C E U P D A T E



# Driver Information Display Faint Blinking With Key Off

# UPDATE

## Configuration Menu –

Holding both buttons on the instrument panel pressed while turning the ignition on enters the “Configuration Menu”. In this menu configurable features can be enabled and disabled. If the cluster has logged less than 25 miles, all menu selections can be changed using the buttons. After 25 miles some items will only be able to be modified using a diagnostic tool via PC or by entering the “UNLOCK” feature (see below).

To change a feature configuration with the buttons scroll up or down to the desired feature and then press both buttons to change the configuration. This menu will auto exit and the cluster will reinitialize its startup routine after 10 second timeout with no activity.



## Unlock

Selecting this option will allow the user to enter a password using the buttons on the cluster in order to unlock the configurations that lock out after 25 miles. The asterisk will highlight and characters will be incremented by pressing the up button. Pressing the down button will advance to the next character. Pressing both buttons when the last character is selected will make all configurations accessible. If no configuration item is selected before the menu timeout in 20 seconds the cluster will reset and the password must be re-entered to unlock the configuration items again. **Password is “1927”.**

## Battery Controlled Lift

Default Value = DISABLED – Production Order Feature (ONLY ENABLE IF BATTERY CONTROLLED WHEELCHAIR LIFT FEATURE 31045-02 IS ON ORDER).

When this configuration is ENABLED the wheelchair lift and related functions will operate with ignition off.

When this configuration is DISABLED the wheelchair lift and related functions will operate only with the ignition on.



S U I 2 I 8  
S E R V I C E U P D A T E